


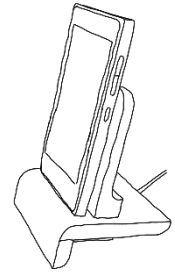

Assembly instruction: Lambda – the universal docking station

Congratulations for purchasing the Lambda Docking station.

Only few steps are missing to bring your dock into usage. You need only your smartphone and a cable. All steps are also shown in the product video accessible through www.ck-altstaedt.de.



1	<p>Take the base and the rear wall out of the box and prepare the hex-wrench.</p> <p>(Optional based on delivery-box) Arrange the base in front of you, standing on the side. Pick up a screw and disk with the hex-wrench. Assemble the rear-wall with the base by tightening the screw lightly</p>	
2	<p>Direct the cable-connector from below into the notch for the cable. Tighten the screw so far that the connector still can be moved. The connector should stick out ca. 2 mm from the surface of the base.</p> <p>For Micro-USB connectors be take care of the correct orientation of the connector.</p>	
2	<p>Combine now the smartphone with the dock and insert the connector into the phone.</p> <p>For the fixation put the smartphone with the display facing down on a table. Press the rear-wall lightly onto the smartphone and tighten the screws. Verify that the rear wall is parallel to the front of the dock.</p>	
3	<p>Press the base now from below against the smartphone and verify the correct position of the connector. Now tighten the center screw carefully.</p> <p>Warning: Tightening the center screw to hardly will damage the dock.</p>	
4	<p>Finally lock the cable with the hook.</p>	

